




- NOTE:**
- 1. Install fasteners according to the manufacturer's recommendations.
 - 2. Overlap in the direction of the prevailing wind.
 - 3. Apply seed mix to bare ground before installing staked down rolled erosion control product.

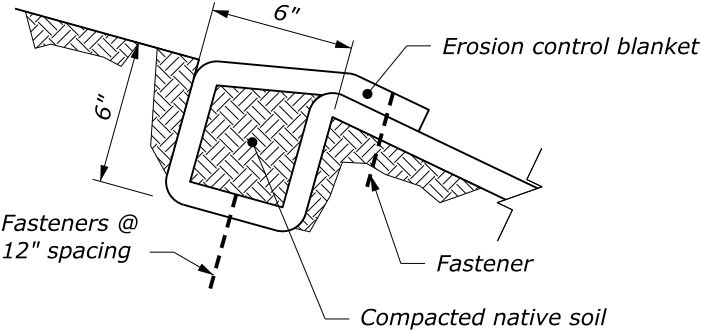


**DETAIL A
ANCHOR TRENCH
AT TOP OF SLOPE**

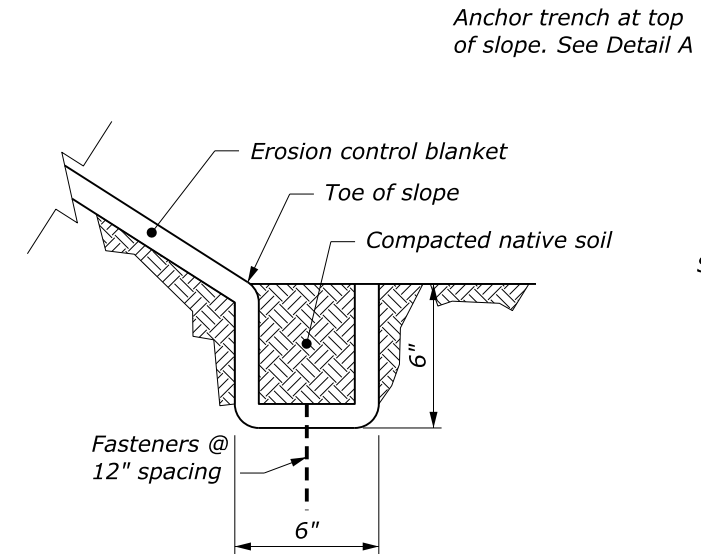

**DETAIL B
ANCHOR TRENCH
AT TOE OF SLOPE**

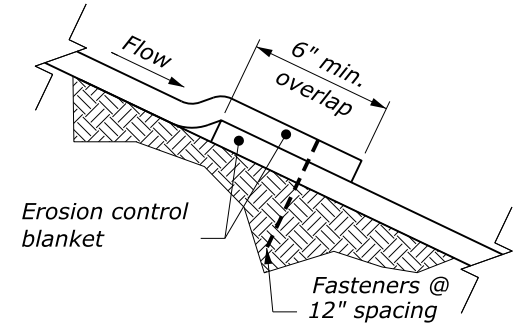

**DETAIL C
SHINGLE SPLICE**

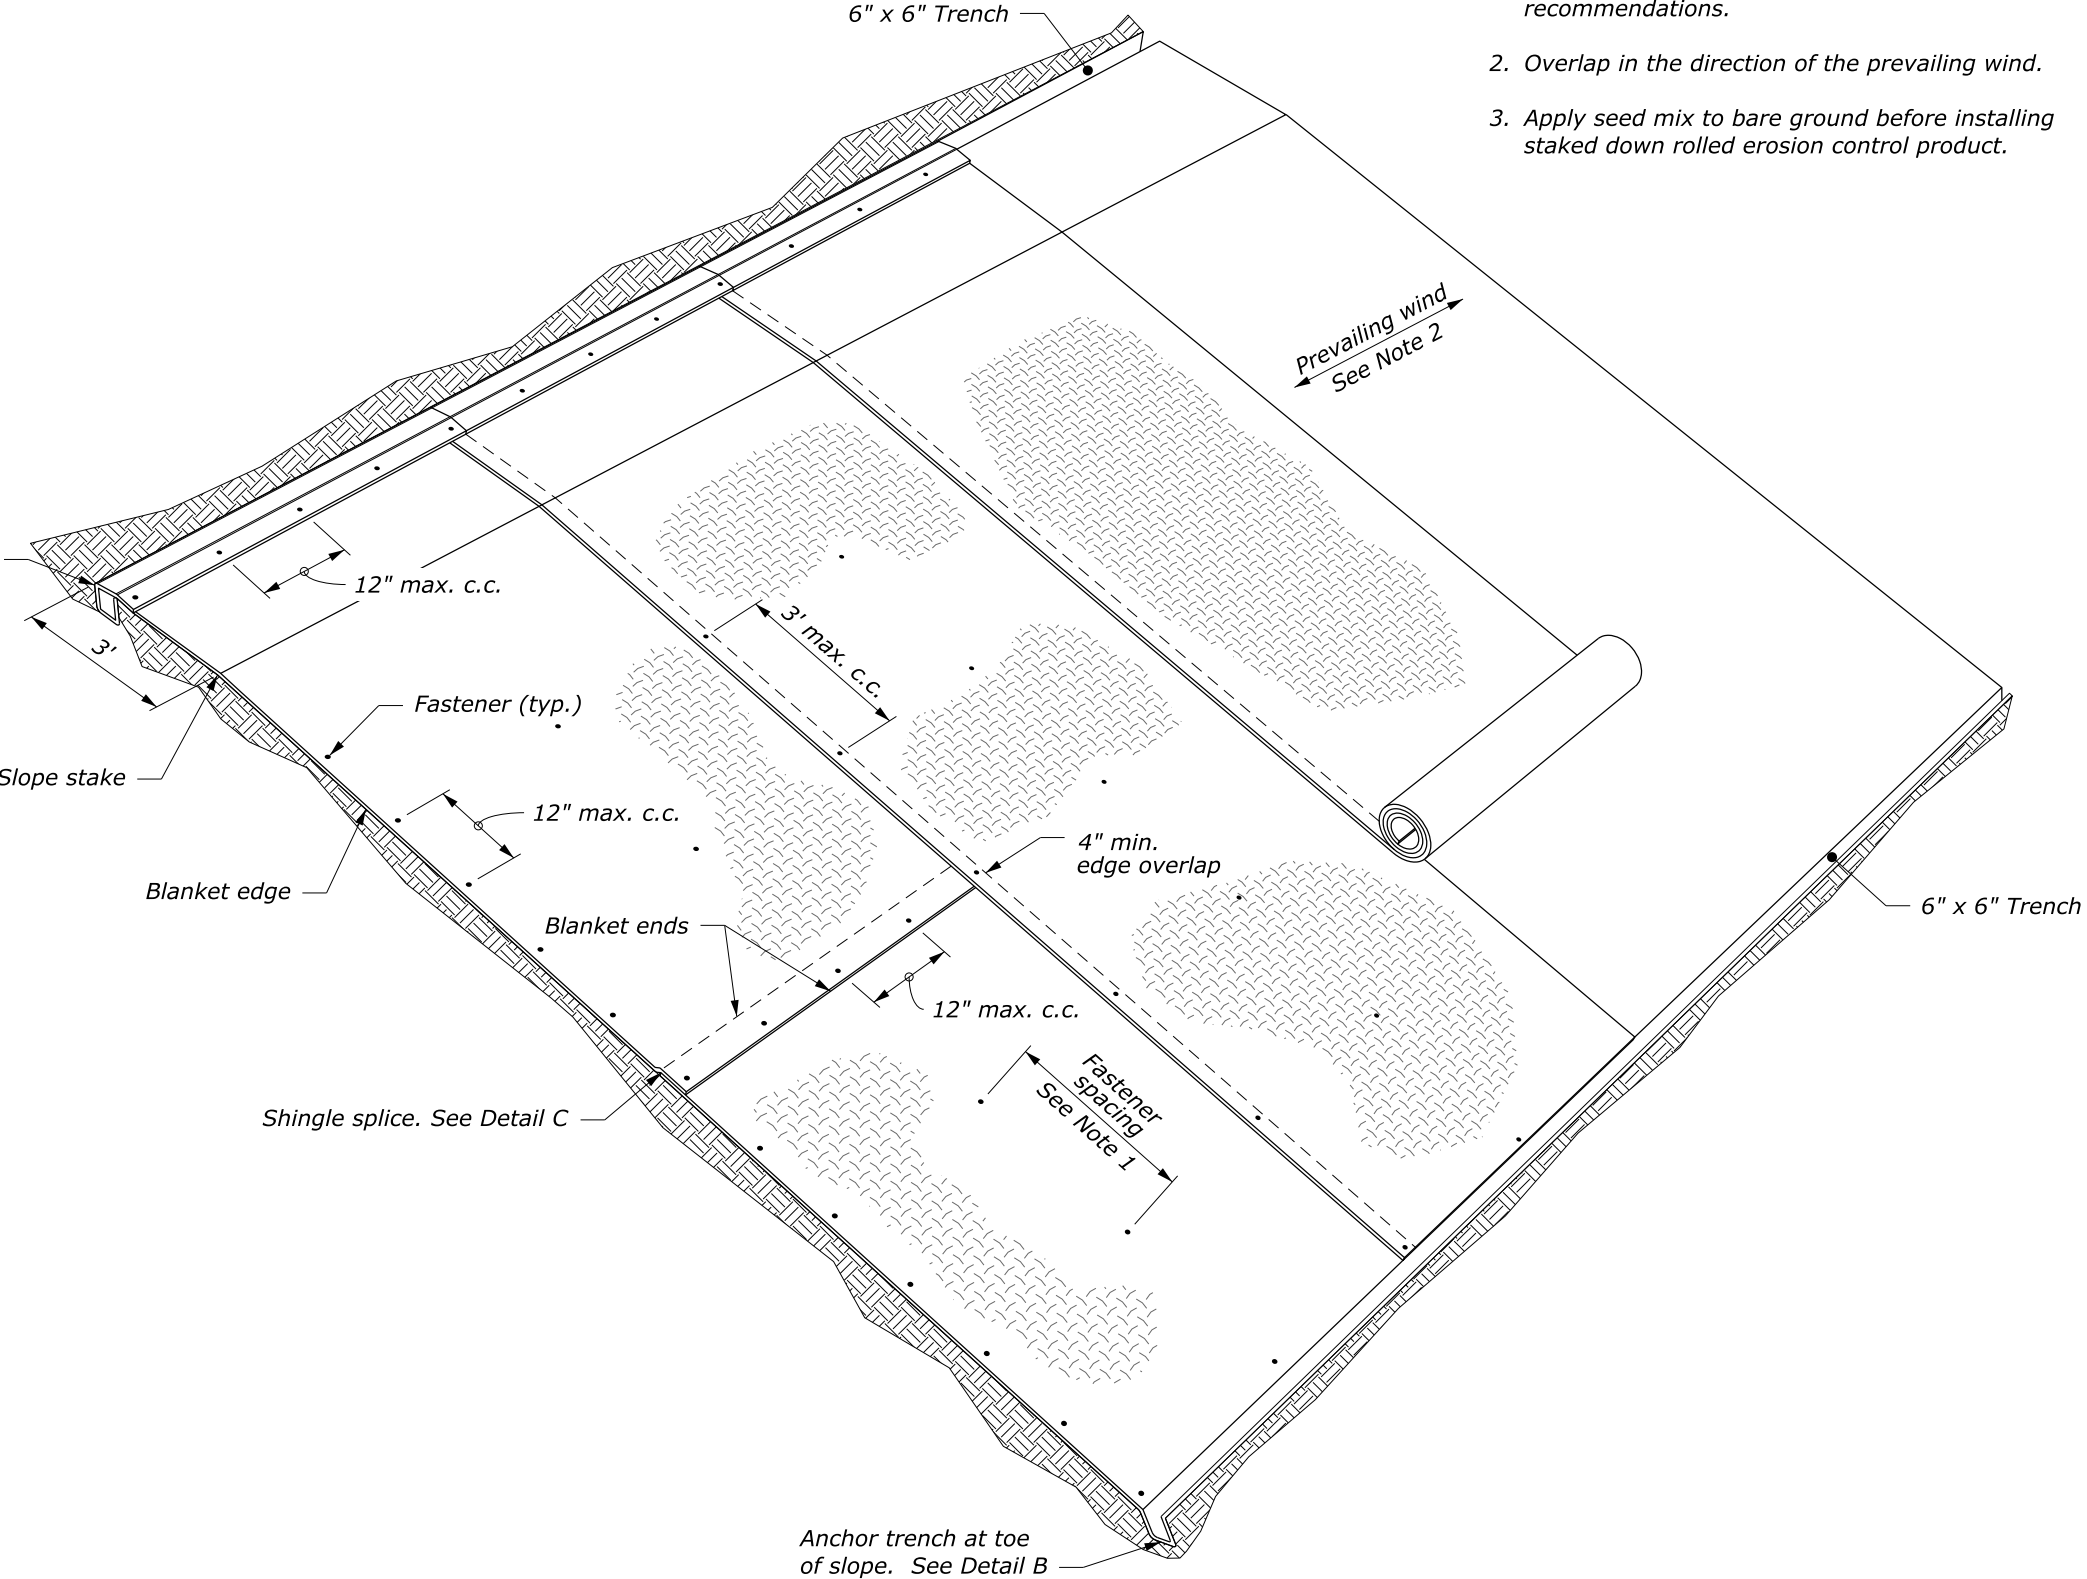


PERSPECTIVE VIEW

NO SCALE


U.S. DEPARTMENT OF TRANSPORTATION, FHWA OFFICE OF FEDERAL LANDS HIGHWAY	FLH STANDARD 629-1
ROLLED EROSION CONTROL PRODUCT ON SLOPES	SPECIFICATION FP-24
	APPROVED FOR USE 5/2026

NOTE:


1. Install fasteners according to the manufacturer's recommendations.
2. Overlap in the direction of the prevailing wind.
3. Apply seed mix to bare ground before installing staked down rolled erosion control product.

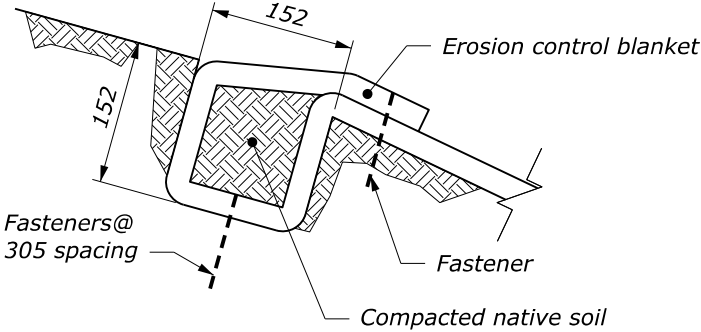


DETAIL A
ANCHOR TRENCH
AT TOP OF SLOPE

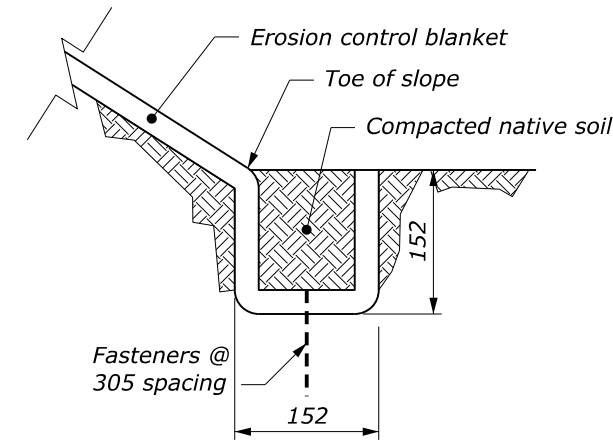

DETAIL B
ANCHOR TRENCH
AT TOE OF SLOPE

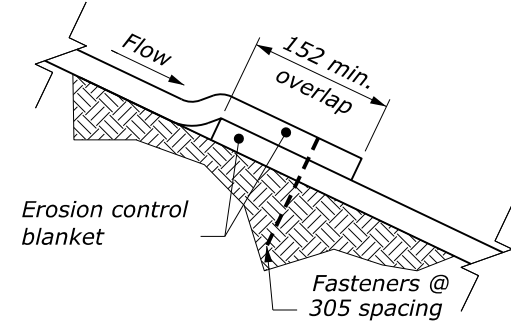

DETAIL C
SHINGLE SPLICE

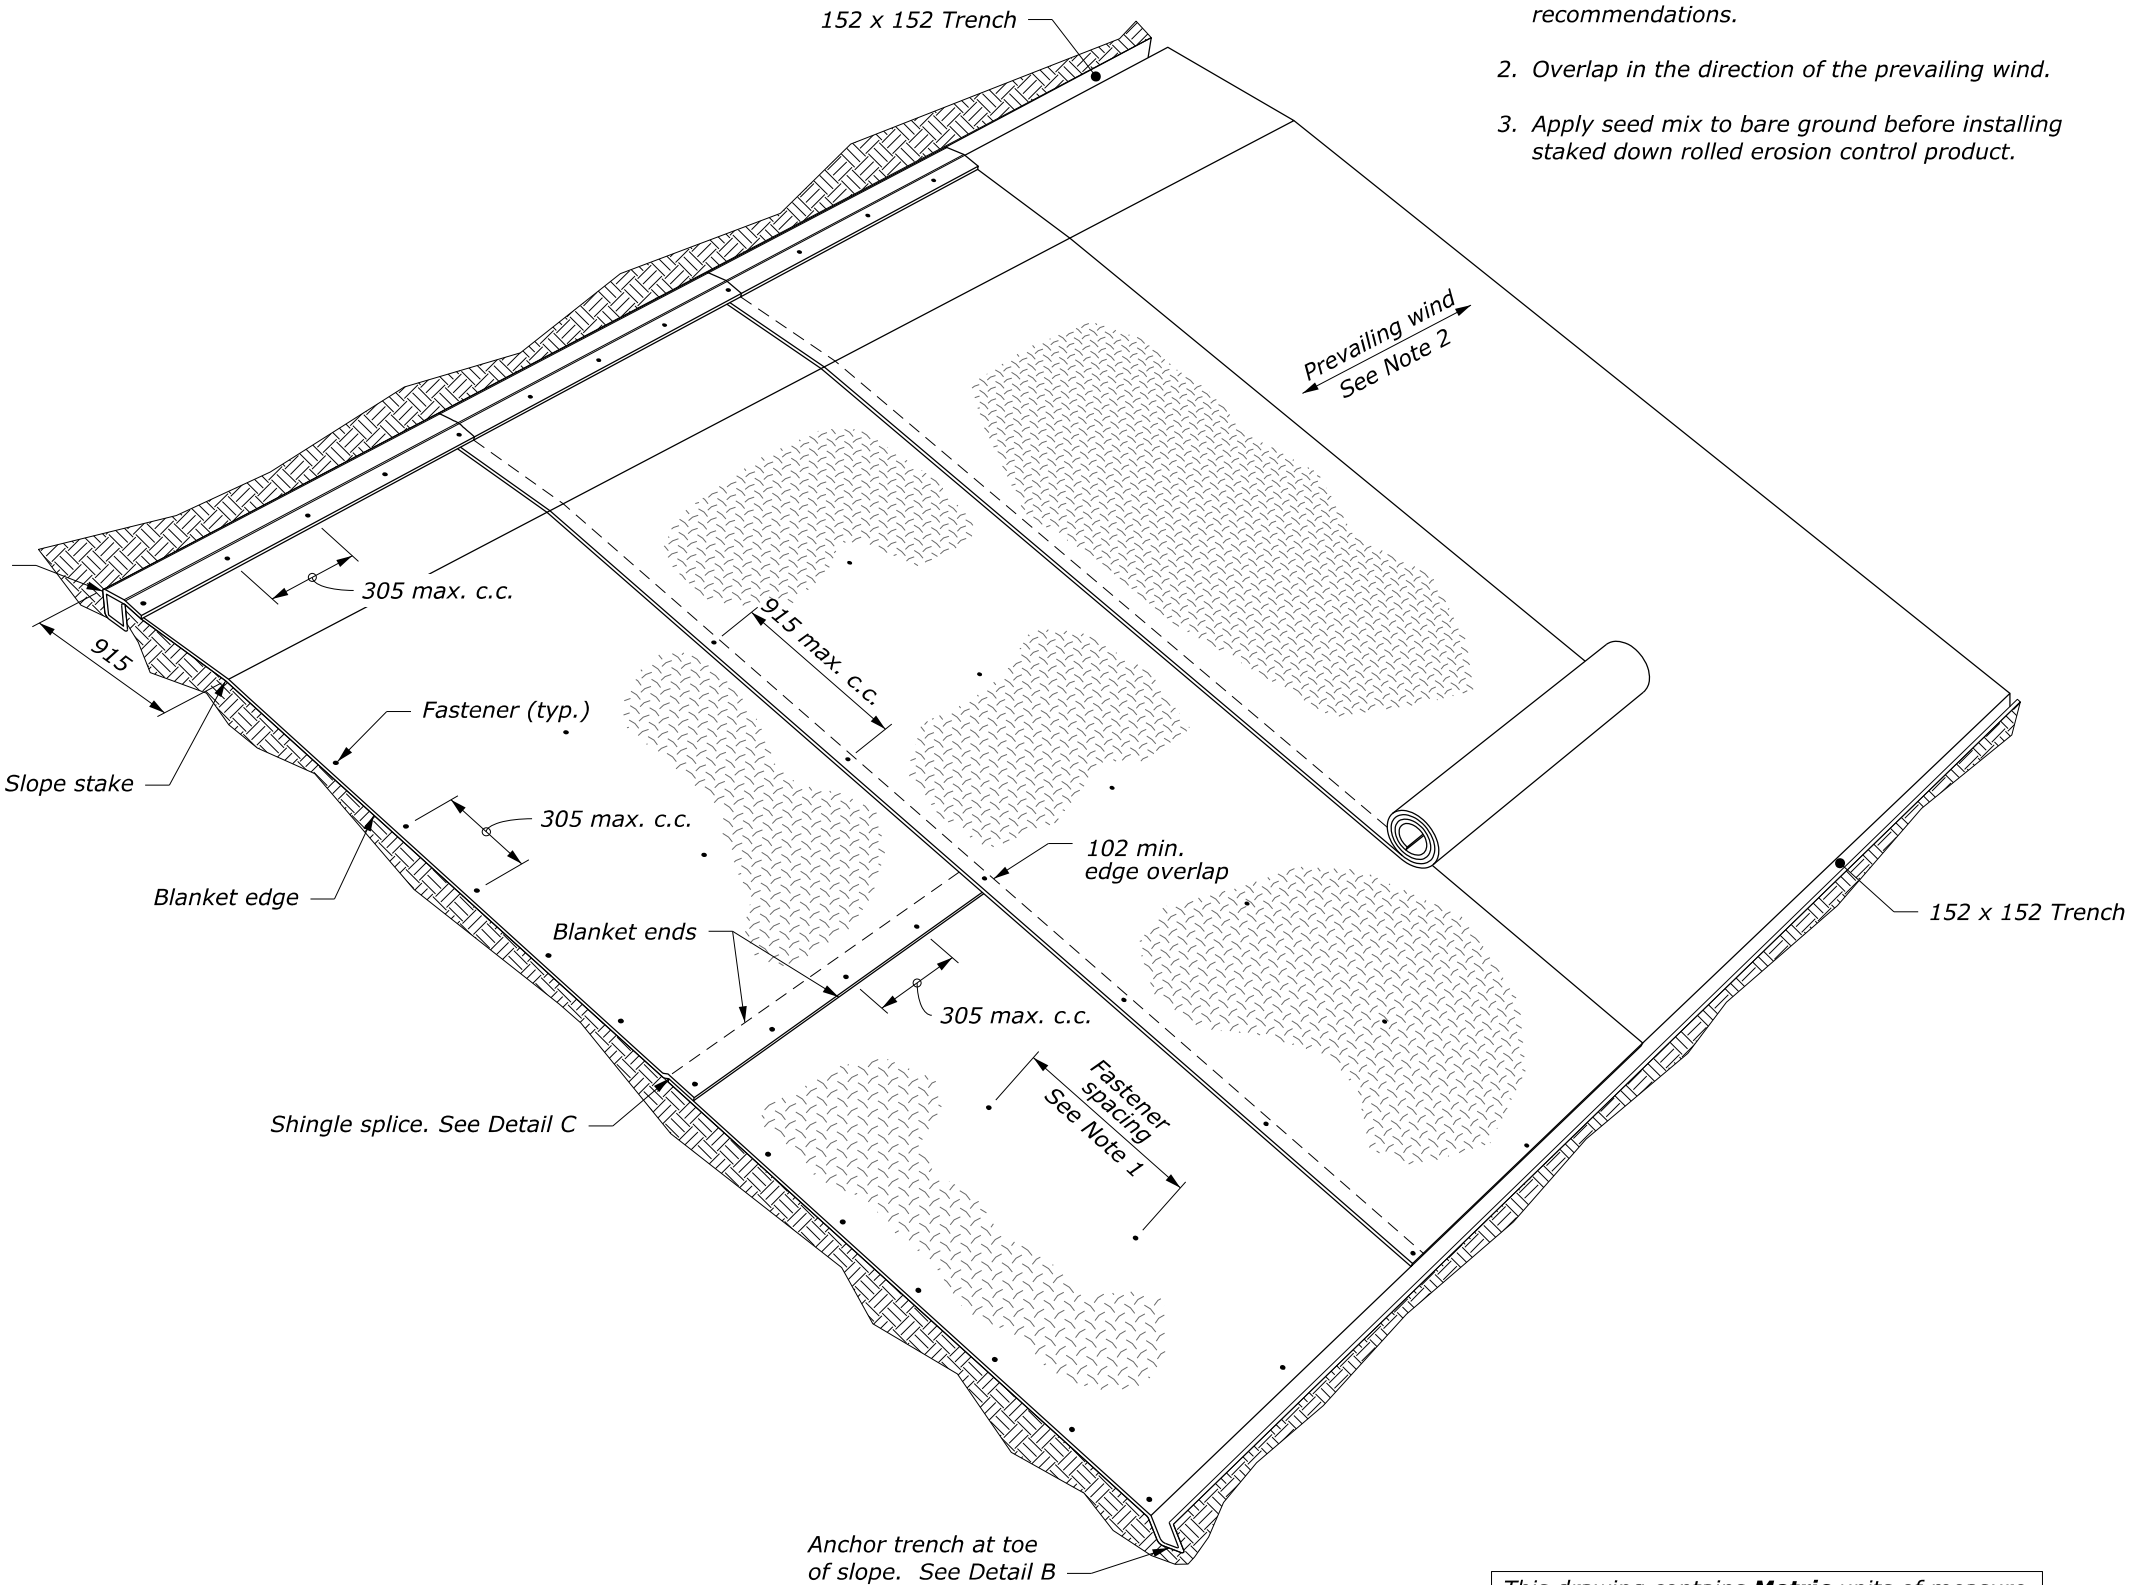

PERSPECTIVE VIEW

NO SCALE

This drawing contains **Metric** units of measure.
Dimensions without units are millimeters.

U.S. DEPARTMENT OF TRANSPORTATION, FHWA OFFICE OF FEDERAL LANDS HIGHWAY	FLH STANDARD M629-1
ROLLED EROSION CONTROL PRODUCT ON SLOPES	SPECIFICATION FP-24
	APPROVED FOR USE 5/2026