



NOTE:


- 1. Install fasteners according to the manufacturer's recommendations.
- 2. Construct check slots according to the manufacturer's recommendations.
- 3. Roll ends may be spliced in a check slot.
- 4. Trapezoidal ditch shown. Similar details for a V-ditch.
- 5. Apply seed mix to bare ground before installing staked down rolled erosion control product.

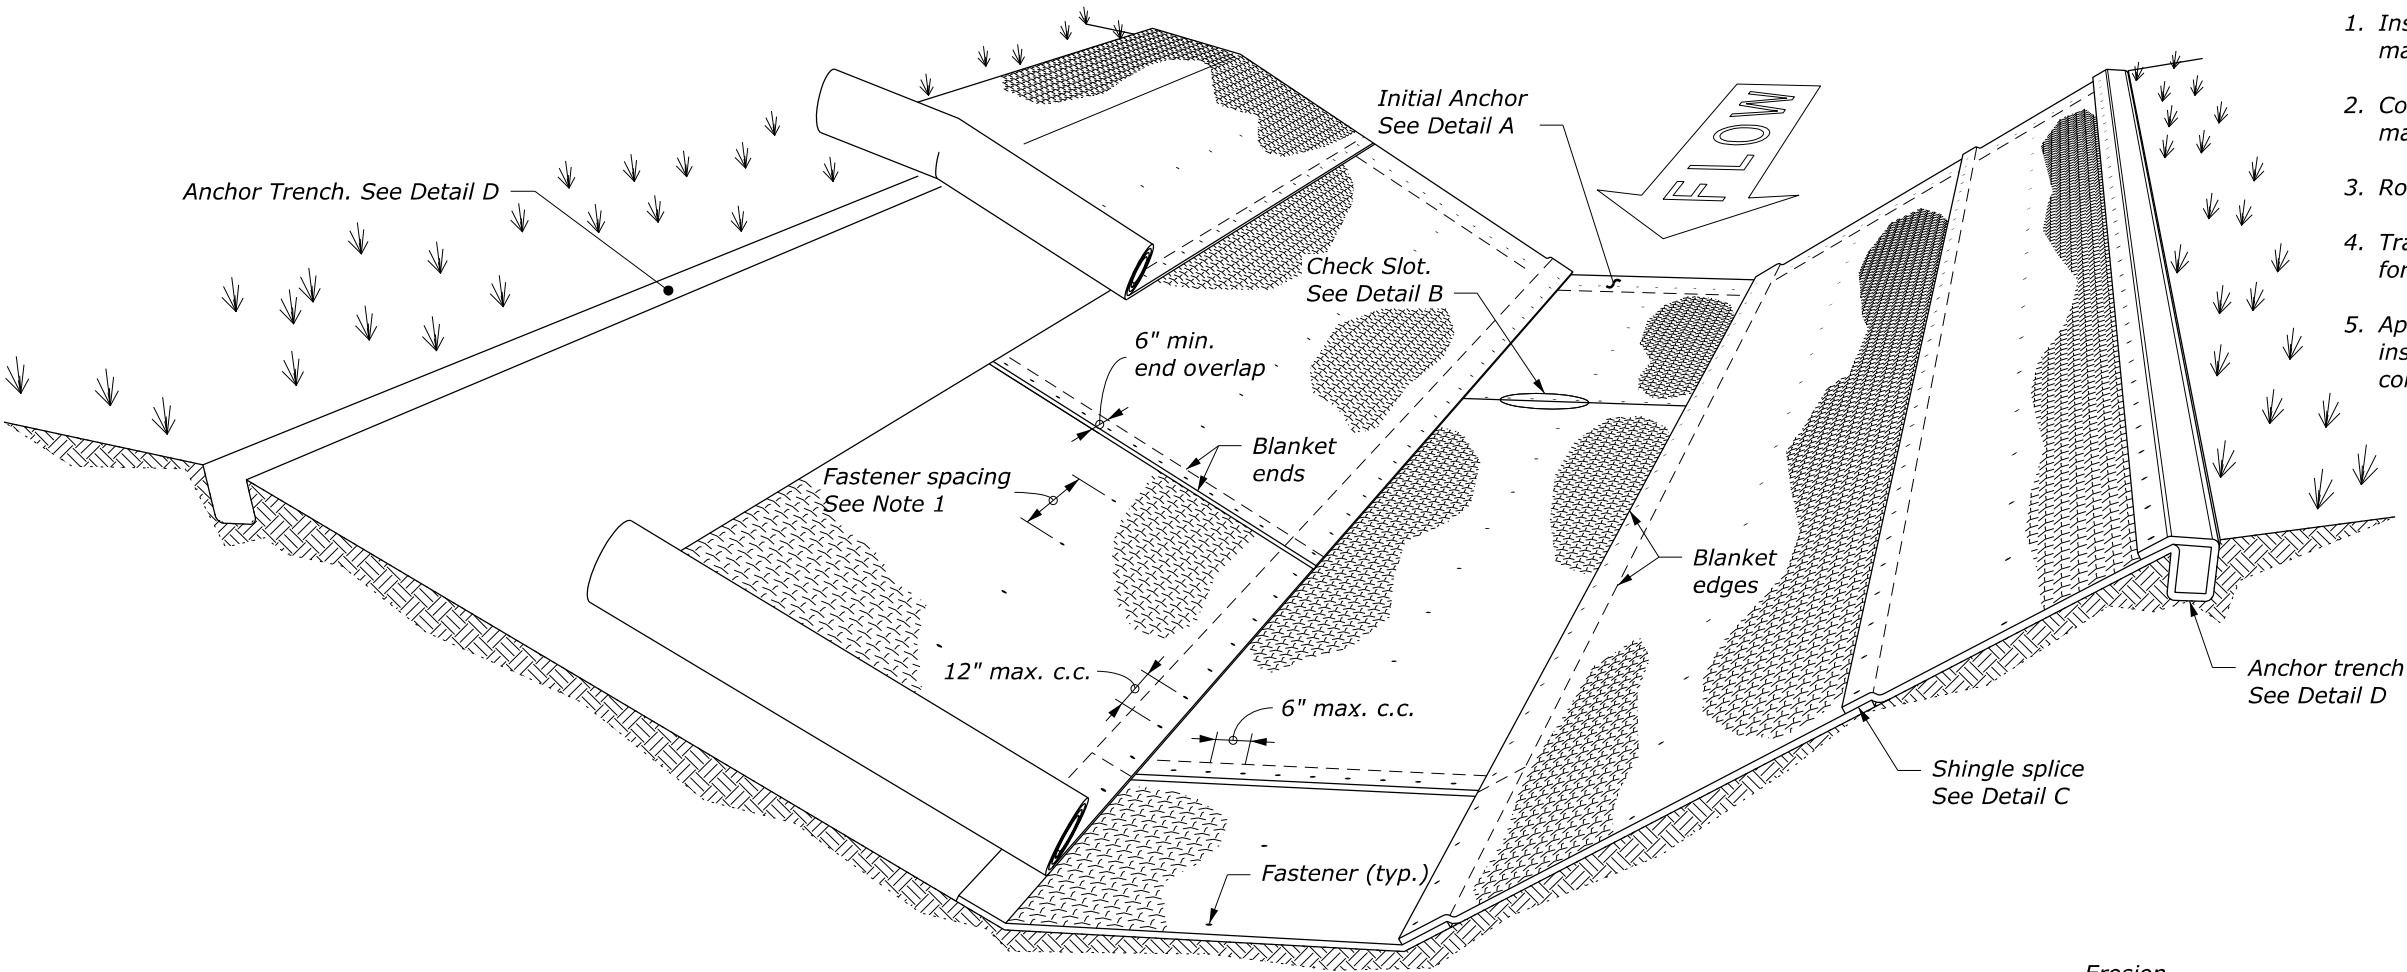


PERSPECTIVE VIEW

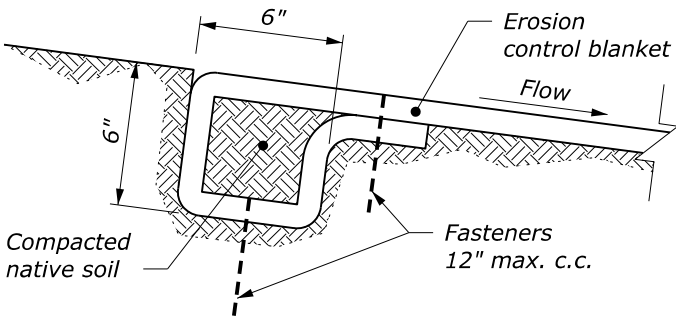


DETAIL A
INITIAL ANCHOR

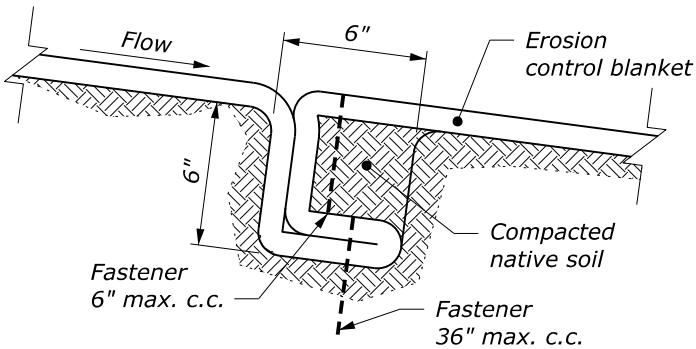

DETAIL B
CHECK SLOT
See Note 2

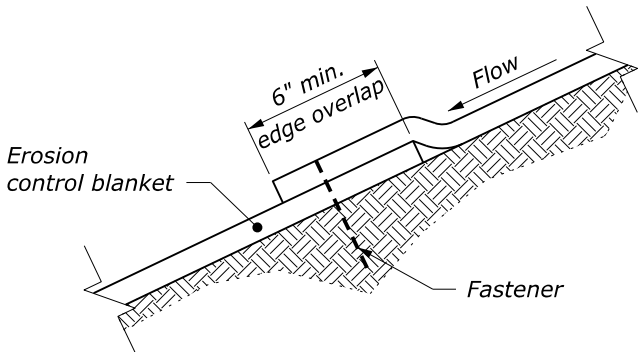

DETAIL C
SHINGLE SPLICE

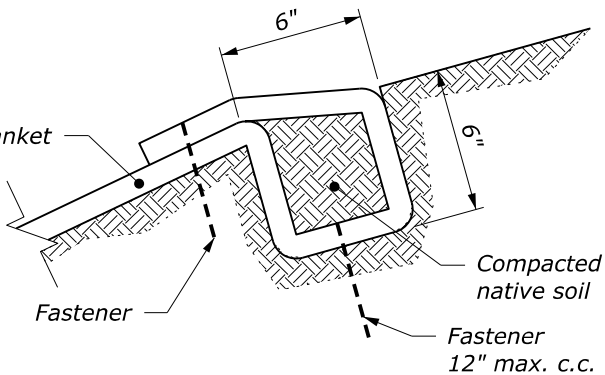

DETAIL D
ANCHOR TRENCH

NO SCALE

U.S. DEPARTMENT OF TRANSPORTATION, FHWA OFFICE OF FEDERAL LANDS HIGHWAY	FLH STANDARD 629-2
ROLLED EROSION CONTROL PRODUCT IN CHANNELS	SPECIFICATION FP-24
	APPROVED FOR USE 5/2026

1. *Install fasteners according to the manufacturer's recommendations.*
2. *Construct check slots according to the manufacturer's recommendations.*
3. *Roll ends may be spliced in a check slot.*
4. *Trapezoidal ditch shown. Similar details for a V-ditch.*
5. *Apply seed mix to bare ground before installing staked down rolled erosion control product.*



NO SCALE