




- NOTE:**
- 1. Install fasteners according to the manufacturer's recommendations.
 - 2. Overlap in the direction of the prevailing wind.
 - 3. Apply seed mix to bare ground before installing staked down rolled erosion control product.

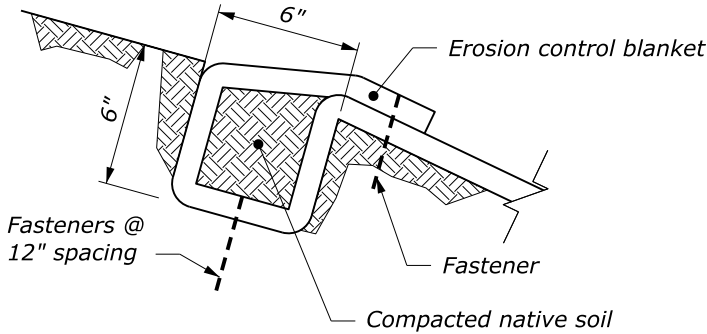


**DETAIL A
ANCHOR TRENCH
AT TOP OF SLOPE**

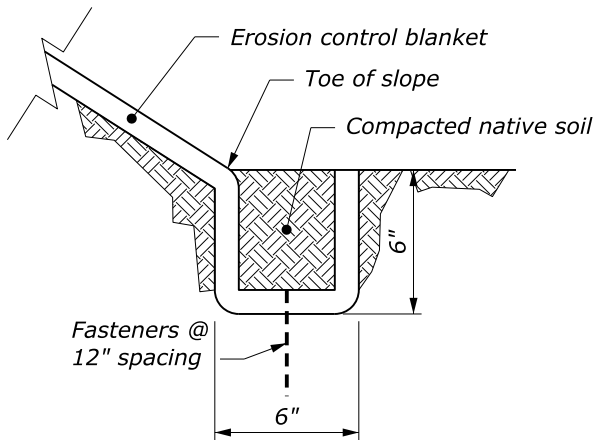

**DETAIL B
ANCHOR TRENCH
AT TOE OF SLOPE**

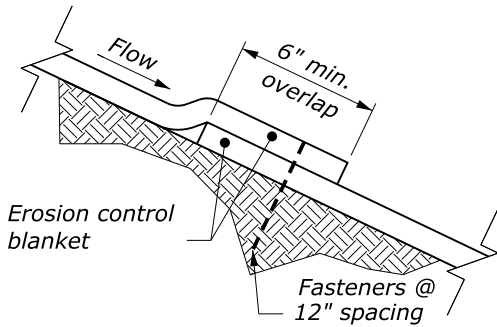

**DETAIL C
SHINGLE SPLICE**

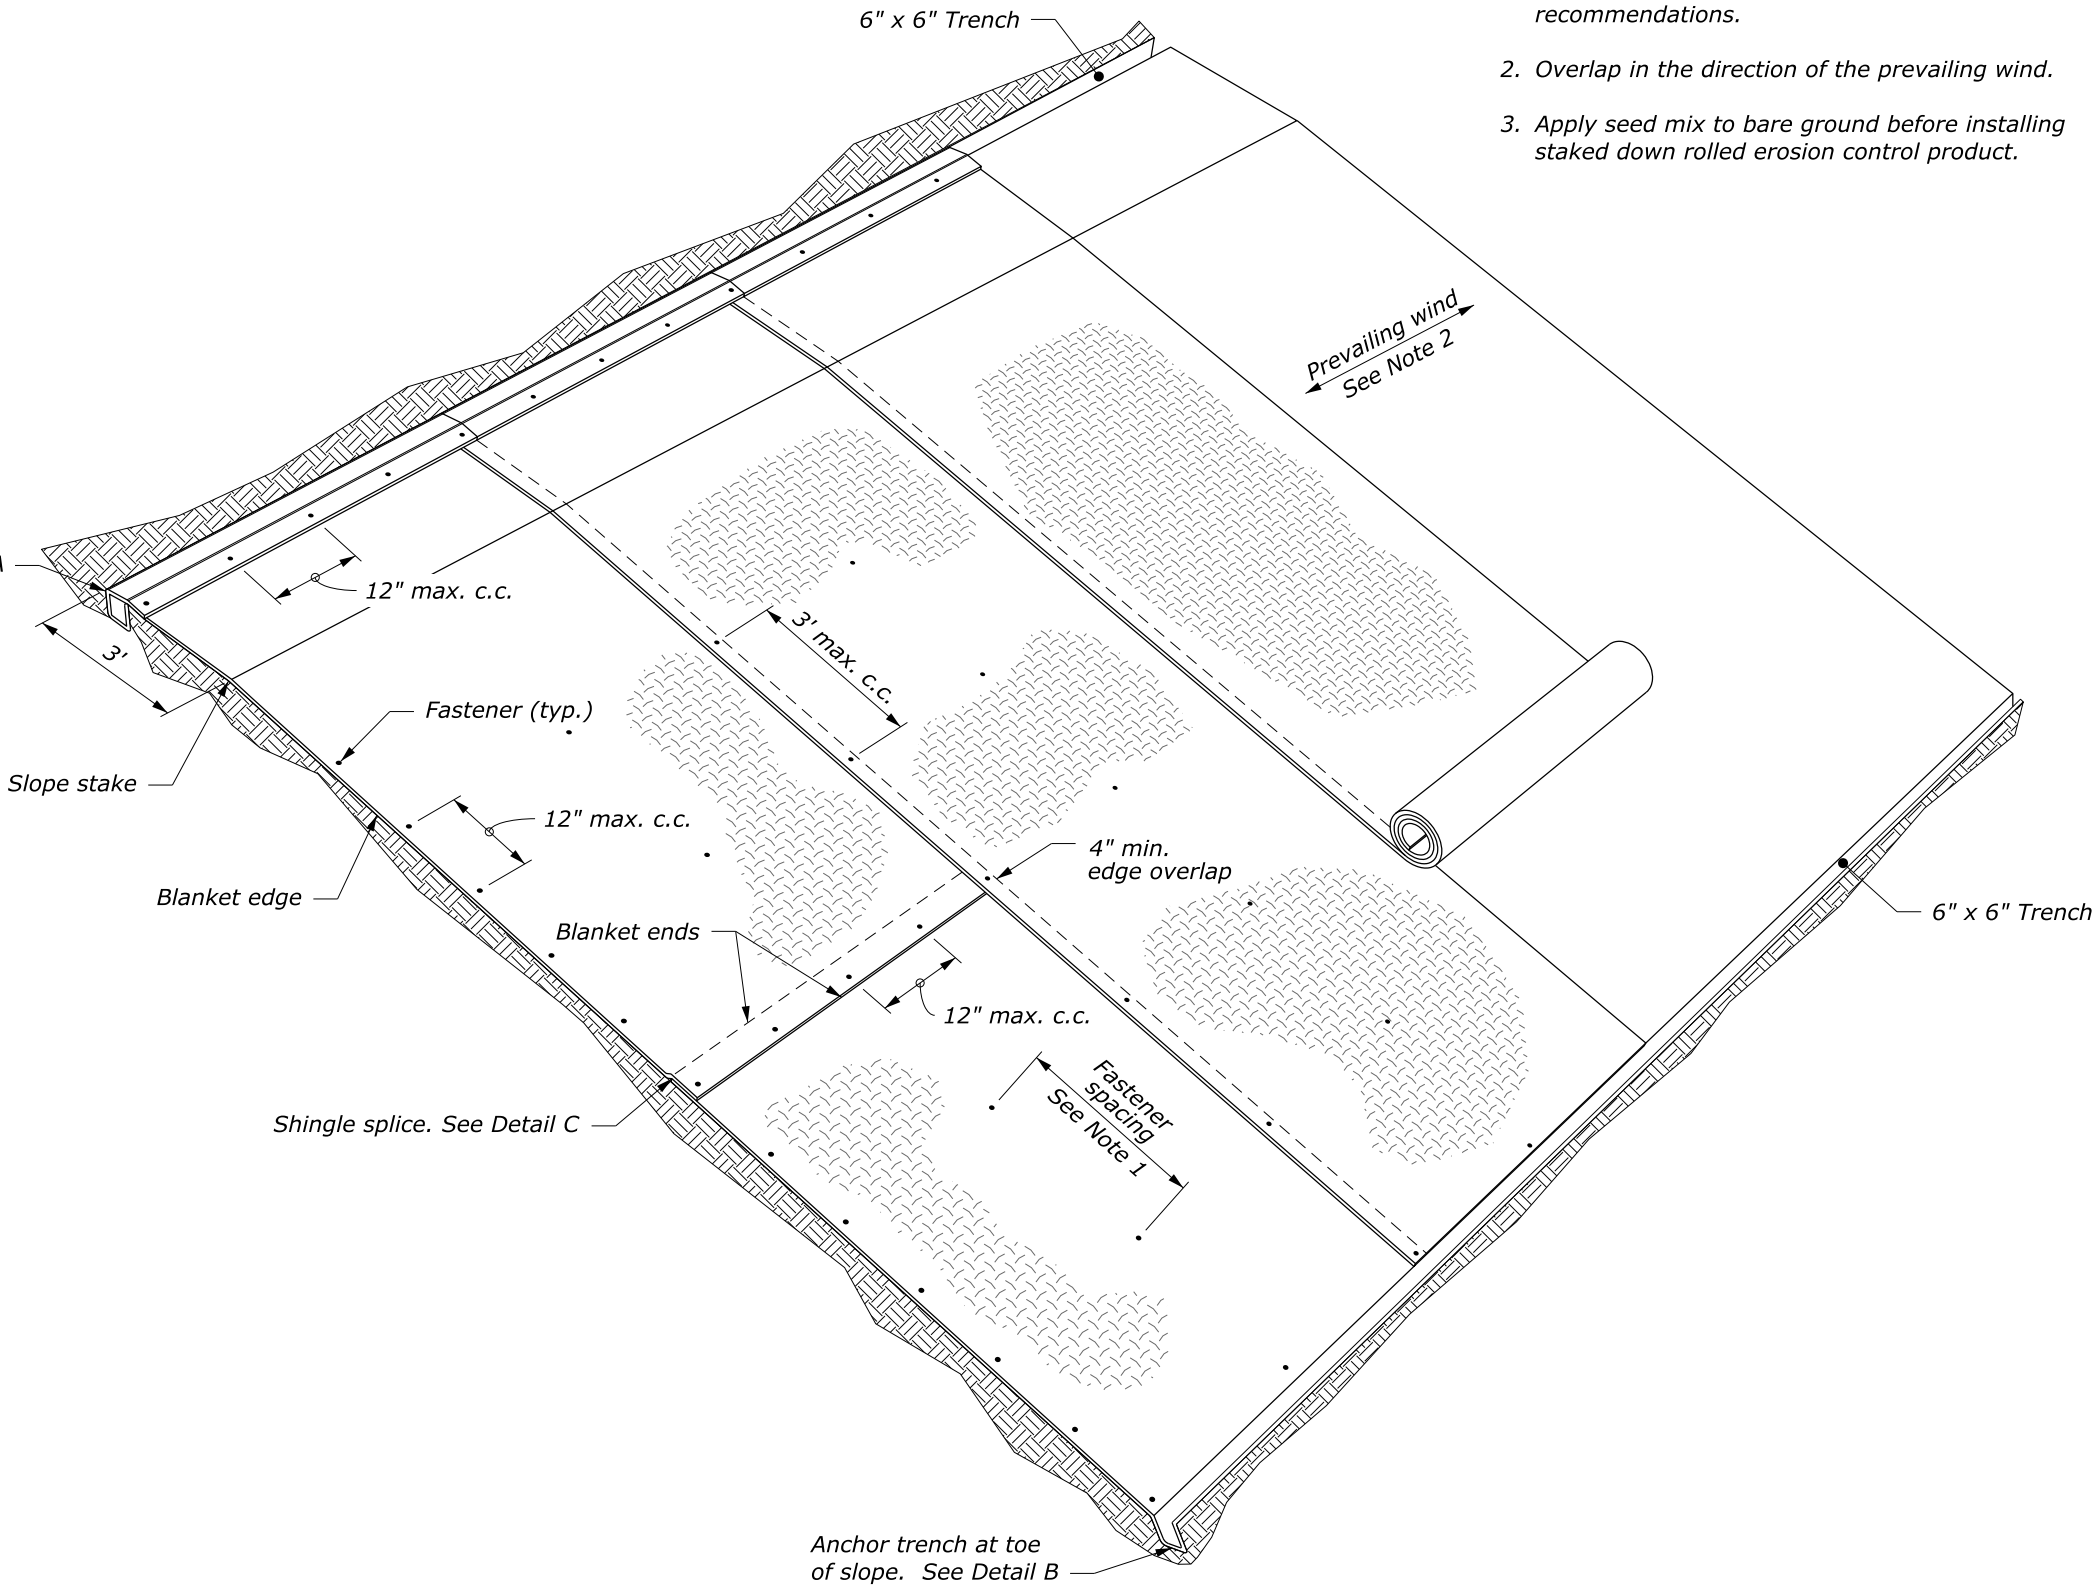


PERSPECTIVE VIEW

NO SCALE


U.S. DEPARTMENT OF TRANSPORTATION, FHWA OFFICE OF FEDERAL LANDS HIGHWAY	FLH STANDARD 629-1
ROLLED EROSION CONTROL PRODUCT ON SLOPES	SPECIFICATION FP-24
	APPROVED FOR USE 5/2026

NOTE:


1. Install fasteners according to the manufacturer's recommendations.
2. Overlap in the direction of the prevailing wind.
3. Apply seed mix to bare ground before installing staked down rolled erosion control product.

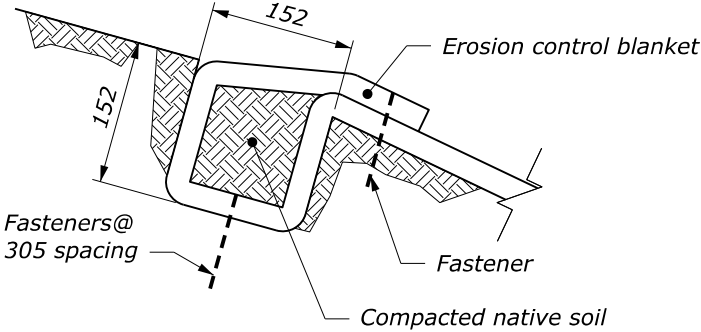


DETAIL A
ANCHOR TRENCH
AT TOP OF SLOPE

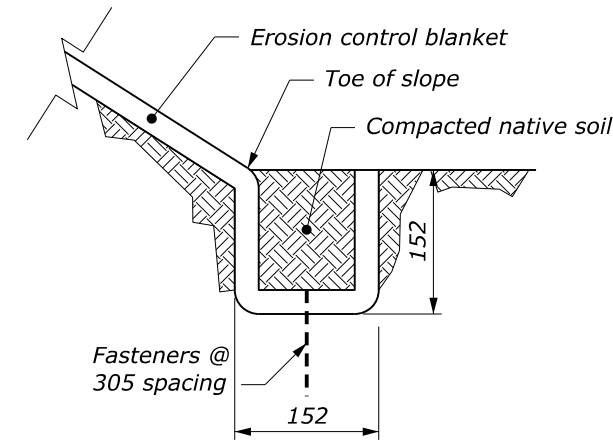

DETAIL B
ANCHOR TRENCH
AT TOE OF SLOPE

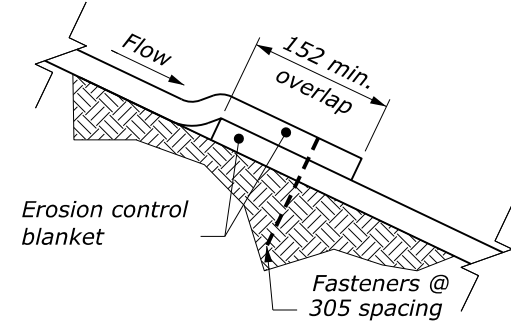

DETAIL C
SHINGLE SPLICE

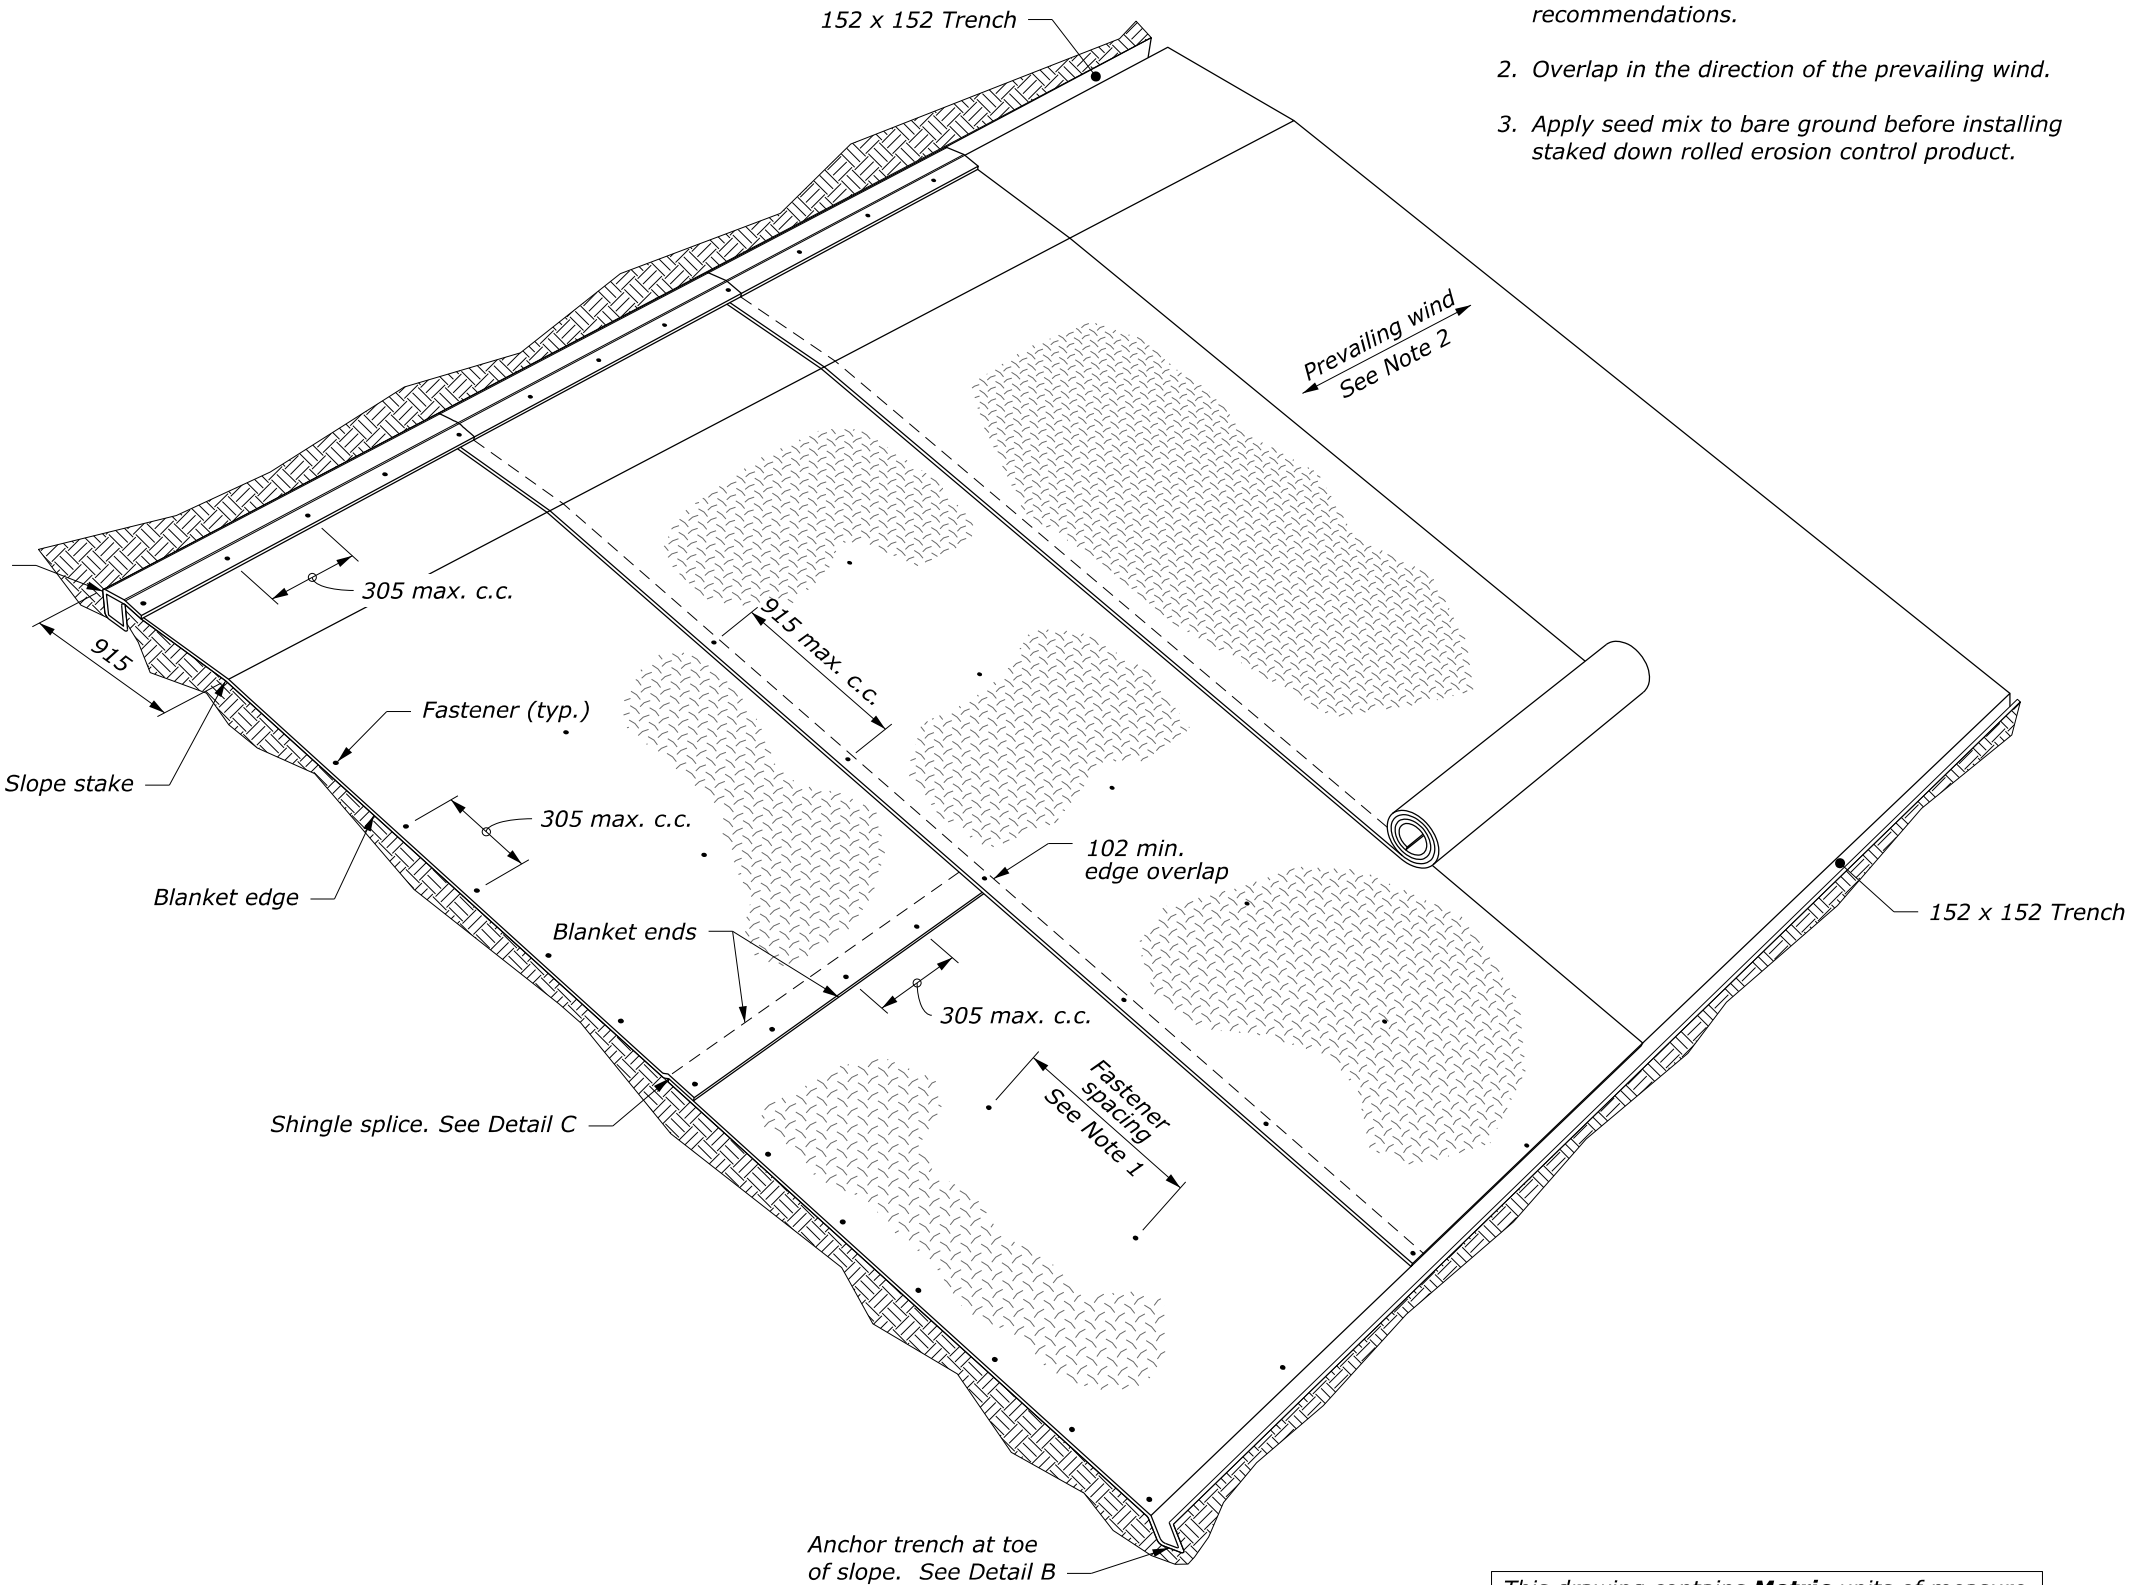

PERSPECTIVE VIEW


NO SCALE

This drawing contains **Metric** units of measure.
Dimensions without units are millimeters.


U.S. DEPARTMENT OF TRANSPORTATION, FHWA OFFICE OF FEDERAL LANDS HIGHWAY	FLH STANDARD M629-1
ROLLED EROSION CONTROL PRODUCT ON SLOPES	SPECIFICATION FP-24
	APPROVED FOR USE 5/2026

NOTE:


- 1. Install fasteners according to the manufacturer's recommendations.
- 2. Construct check slots according to the manufacturer's recommendations.
- 3. Roll ends may be spliced in a check slot.
- 4. Trapezoidal ditch shown. Similar details for a V-ditch.
- 5. Apply seed mix to bare ground before installing staked down rolled erosion control product.

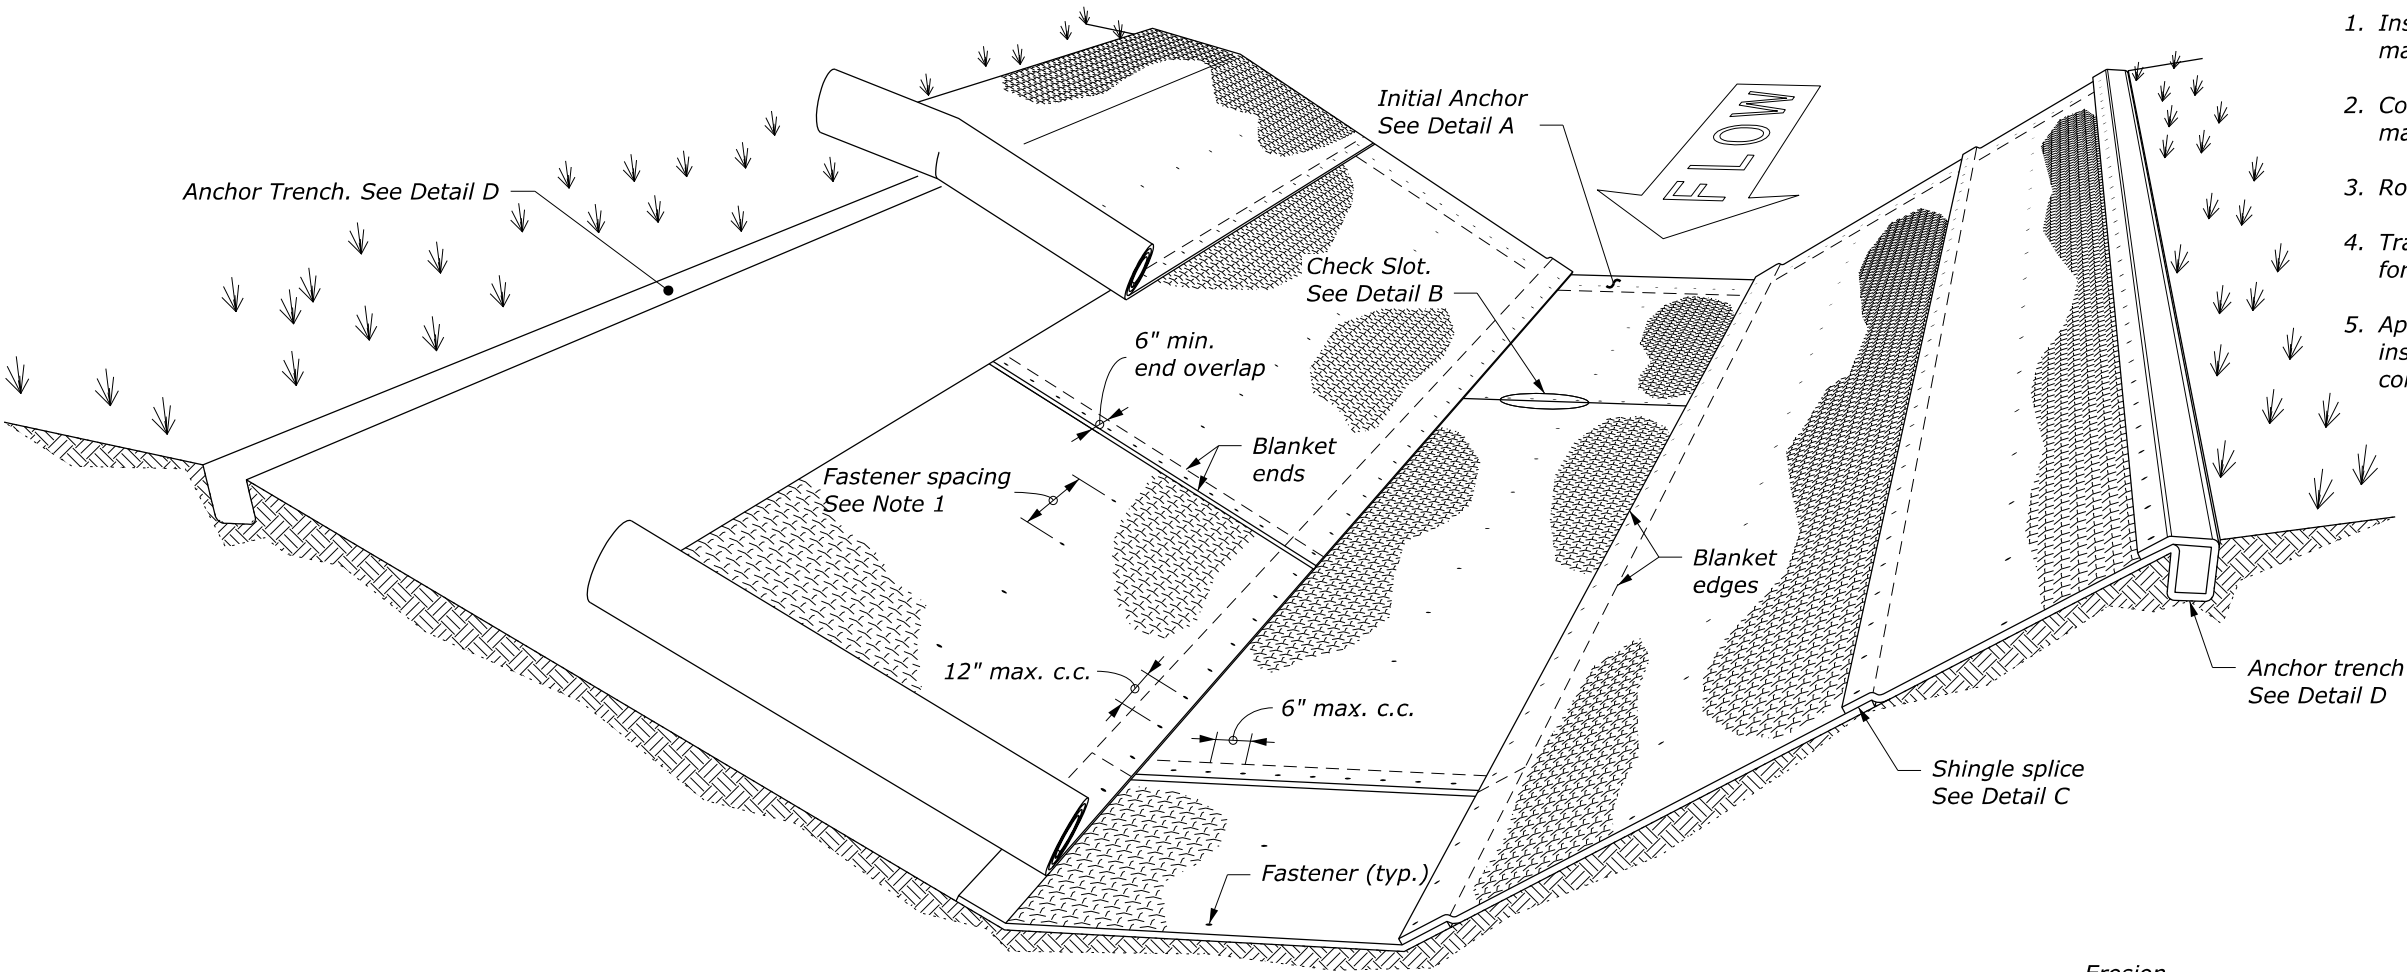


PERSPECTIVE VIEW

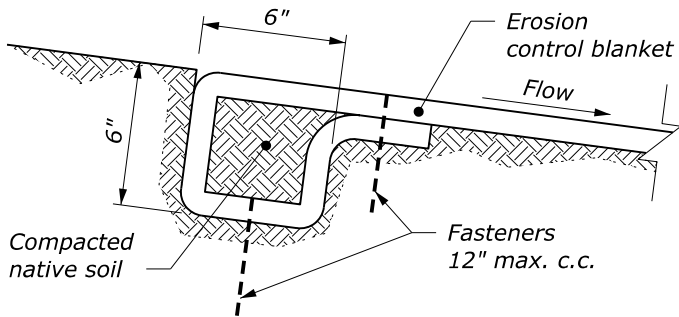


DETAIL A
INITIAL ANCHOR

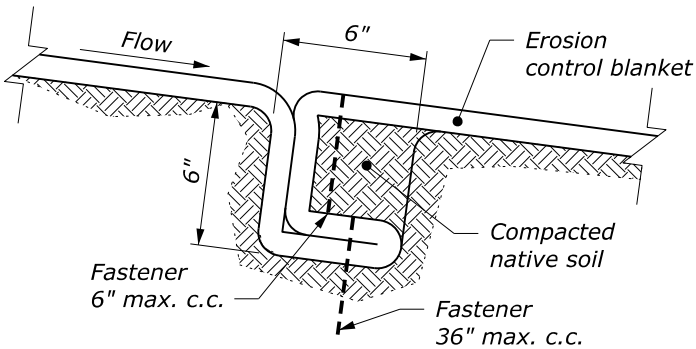

DETAIL B
CHECK SLOT
See Note 2

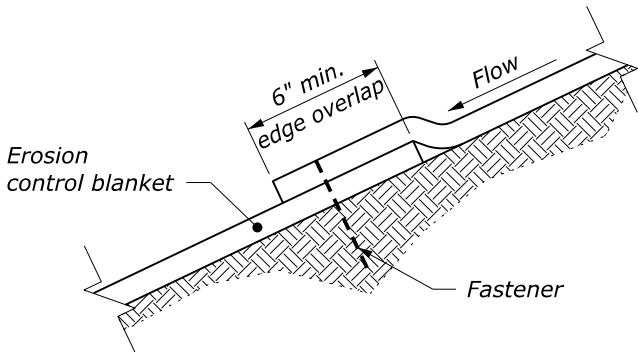

DETAIL C
SHINGLE SPLICE

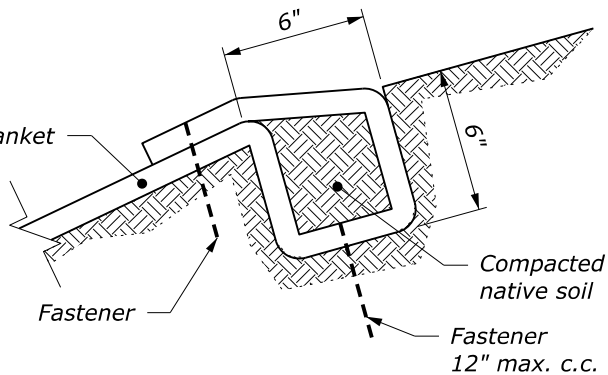


DETAIL D
ANCHOR TRENCH

NO SCALE


U.S. DEPARTMENT OF TRANSPORTATION, FHWA OFFICE OF FEDERAL LANDS HIGHWAY	FLH STANDARD 629-2
ROLLED EROSION CONTROL PRODUCT IN CHANNELS	SPECIFICATION FP-24
	APPROVED FOR USE 5/2026

NOTE:


1. Install fasteners according to the manufacturer's recommendations.
2. Construct check slots according to the manufacturer's recommendations.
3. Roll ends may be spliced in a check slot.
4. Trapezoidal ditch shown. Similar details for a V-ditch.
5. Apply seed mix to bare ground before installing staked down rolled erosion control product.

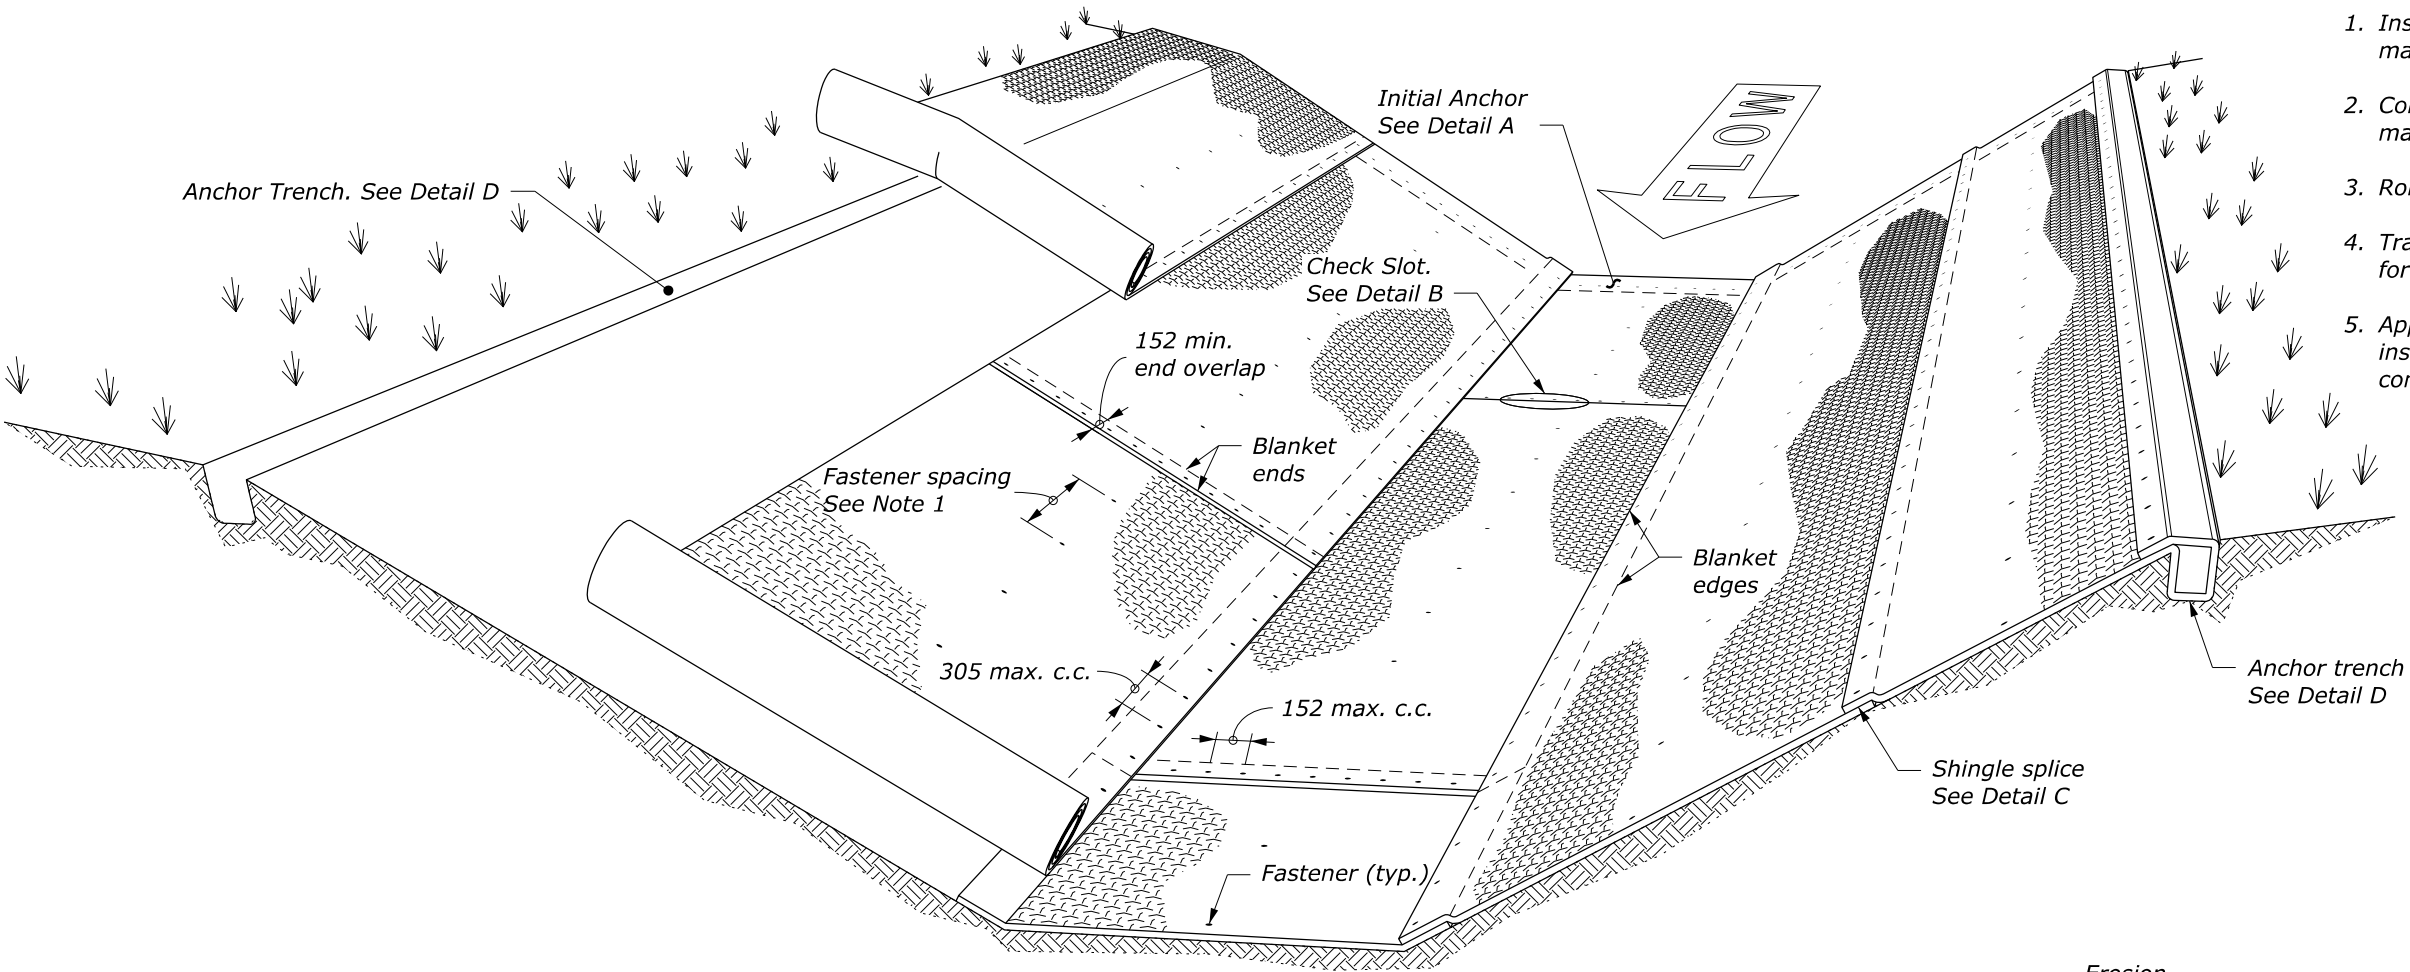


PERSPECTIVE VIEW

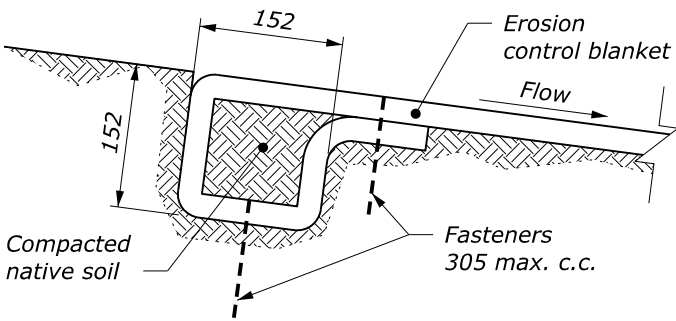

DETAIL A
INITIAL ANCHOR

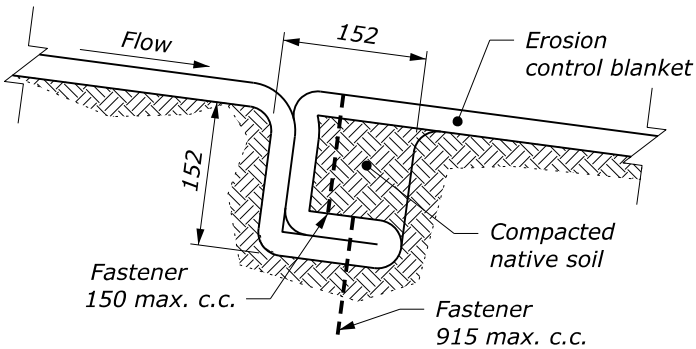


DETAIL B
CHECK SLOT
See Note 2

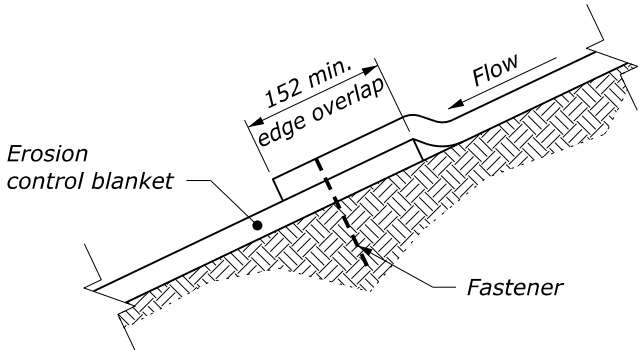

DETAIL C
SHINGLE SPLICE

NO SCALE

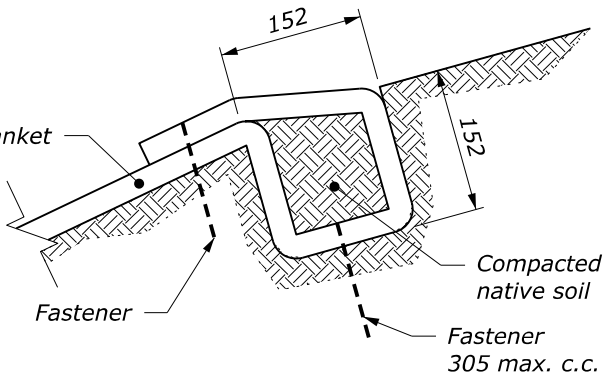

DETAIL D
ANCHOR TRENCH

This drawing contains **Metric** units of measure.
Dimensions without units are millimeters.

U.S. DEPARTMENT OF TRANSPORTATION, FHWA OFFICE OF FEDERAL LANDS HIGHWAY	FLH STANDARD M629-2
ROLLED EROSION CONTROL PRODUCT IN CHANNELS	SPECIFICATION FP-24
	APPROVED FOR USE 5/2026